


KT-LCD3 eBike Display User Manual

V1.0

Dear customer, please read this manual before you use KT-LCD3 instrument. The manual will guide you use the instrument correctly to achieve a variety of vehicle control and vehicle status display.

Functions and Display

Instruments using the structure form of instrument body portion and the operation buttons are designed separately.

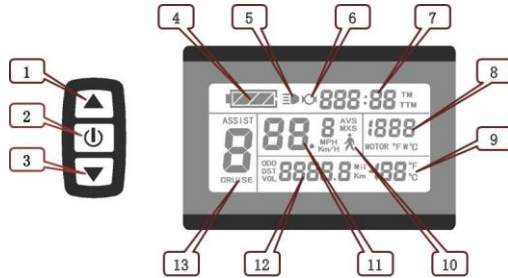

| | | | | | |
|---|--|----------------------------|----|---------------|-------------------------|
| 1 | | UP Button | 10 | | 6Km/H push power assist |
| 2 | | SW Button | 11 | | Riding speed(metric) |
| 3 | | DOWN Button | | | Riding speed (imperial) |
| 4 | | Battery capacity indicator | | | MAX speed |
| 5 | | Backlight and headlights | 12 | | Average speed |
| 6 | | The brake display | | | Distance(metric) |
| 7 | | Single trip time | | | Distance (imperial) |
| | | Total trip time | | Trip distance | |
| 8 | | Power display | 13 | | Total distance |
| | | Motor temperature | | | Battery voltage |
| | | Motor fahrenheit | | | Pas level |
| 9 | | Environment temperature | 13 | | Cruise |
| | | Environment fahrenheit | | | |

Operation

1. ON/OFF


Hold button long to turn on the power, and hold long for a second time to turn off the power. When the motor stops driving and when the e-bike is not used for a consecutive 5 minutes, it will automatically shut down and turn off the motor power supply.

2. Display 1



Hold button to start up and enter display 1.

2.1 Turn on backlight and headlights

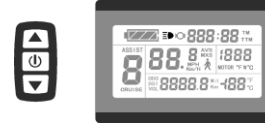

Hold long to turn on backlight and headlights (the controller should have headlight drive output function); hold long again to turn off the backlight and headlights.

2.2 Assist ratio gear (ASSIST) switch



Hold or shortly to switch 1-5 file gear. Gear 1 is for the minimum power, gear 5 is for the highest power. Each startup will automatically restore the gear shutdown last time(the user can set randomly). Gear 0 is without booster function.

2.3 6Km/H assist promotion function



Hold and flashes, the vehicle drives at the speed not more than 6Km /h. Release button, the function is invalid.

2.4 Cruise function



After the cruise function is turned on, the trip riding speed is greater than 7 km/ h, hold long and enter cruise, the CRUISE lit. Brake or hold any button to cancel.

2.5 Display and delete of single data



After power on for 5 seconds, hold and at the same time, single trip riding time (TM) and single trip distance (DST) flash, hold button shortly, the content of both is cleared. If failed holding the button within 5 seconds, it will automatically return the display interface after 5 seconds, original content is preserved.

3. Display 2



Hold button shortly in display 1 to enter display 2.

In the riding mode after 5 seconds, display 2 automatically returns to display 1, and the original motor power (MOTOR W) display is replaced with motor operating temperature display

(MOTOR °C) display (the internal motor should be equipped with the temperature sensor and the output of temperature detection signal).

4. Display 3



Hold button shortly in display 2 to enter display 3.

In the riding condition, five seconds later, a single maximum speed (MXS) display automatically returns to the real riding speed (Km/H).

5. In display 3, hold button shortly (SW), and the display will re-enter display 1.
6. Hold button to turn off the display and the power supply of controller.
7. Automatically prompt interface

7.1 Error Code display

| Error Code | Definition |
|------------|--|
| 01__info | Throttle Abnormality |
| 03__info | Motor hall signal Abnormality |
| 04__info | Torque sensor signal Abnormality |
| 05__info | Axis speed sensor Abnormality(only applied to torque sensor) |
| 06__info | Motor or controller has short circuit Abnormality |



Electronic control system failure will display (flashing) fault code. Once the fault was removed, it automatically exits from the fault code display interface.

7.2 Motor temperature alarm

When the motor temperature (the internal motor should be equipped with the temperature sensor and the output of temperature detection signal) is over the warning value, MOTOR °C (°F) flashes to alarm at any display, meanwhile the motor controller will offer the appropriate protection to motor.


General Project Setting

1. Set maximum riding speed



After power on for 5 seconds, hold and at the same time, maximum riding speed Km/H and MXS flash, hold or shortly to set the maximum riding speed (default 25Km/H). Hold button shortly and go to the next parameter settings.

2. Wheel diameter setting

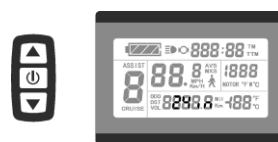

The wheel diameter will be set after finishing setting the maximum riding speed, wheel diameter specifications flashes. Hold or shortly to set the specifications of wheel diameter. Select the range 6,8,10,12,14,16,18,20,22,24,26,700c and 28 inches. Hold button

shortly and go to the next parameter settings.

3. Set the metric units



The metric units will be set after finishing setting wheel diameter, Km/H and Km flash. Hold or shortly and select the three metric units of speed, mileage, and ambient temperature in

synchronization.

| Display | Metric | Imperial |
|-------------------------|----------------|---------------|
| Riding speed | Km/H | MPH |
| Total distance | Km | Mil |
| Environment temperature | °C Temperature | °F Fahrenheit |


4. Km/H and Km stop flash after metric unit setting is completed. Hold button shortly again to re-enter the maximum riding speed setting interface; or hold button long to exit from setting environment of routine projects and save the setting values, returning to display 1.
5. Exit from routine project setting

All three routine project settings can exit from the setting environment and return to the display if hold button long after each setting is completed, meanwhile the setting values are saved.


Under each setting interface, if the button failed holding for more than 1 minute, it will automatically return to display 1, and the setting value is invalid.

Outline Drawings and Dimensions


1. Dimensions of main instrument body

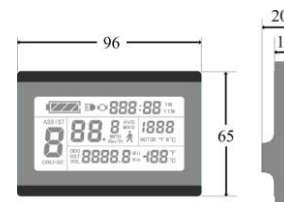

2. Mounting dimensions of double brackets

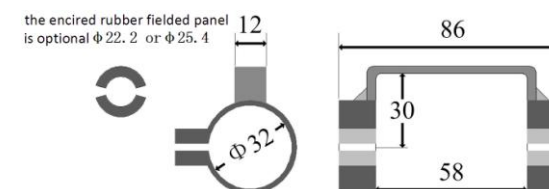

3. Dimensions of button box

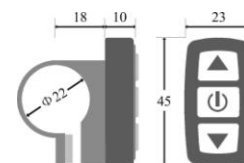

4. Wiring diagram

